


COMMENT ALLUMER MA TÉLÉVISION SAMSUNG THE FRAME ?

ETAPE 1 : Toucher l'écran tactile de votre télécommande Crestron pour l'activer et appuyer le bouton «TV CHANNELS» pour allumer votre télévision.

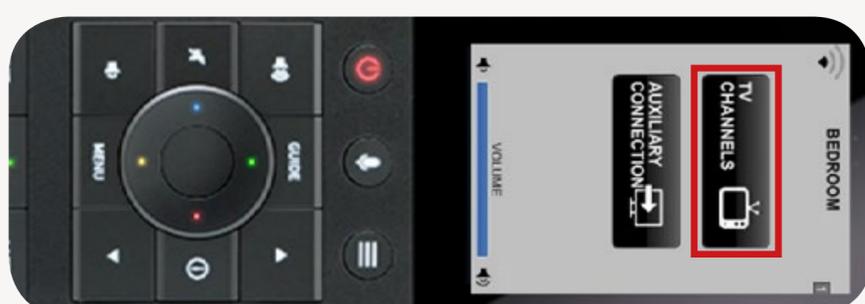


ATTENTION : Si ce choix ne vous est pas proposé, vous n'êtes pas sur la page d'accueil, appuyez sur retour  jusqu'à y arriver.

COMMENT CHANGER DE CHAÎNE ?

OPTION 1 : Après avoir cliqué sur «TV CHANNELS», un clavier numérique apparaît et vous permettra de sélectionner une chaîne.



OPTION 2 : Naviguer entre les différentes chaînes avec les flèches.

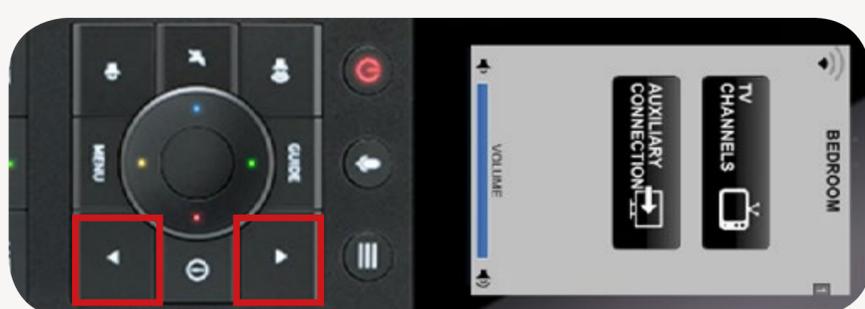

COMMENT ÉTEINDRE MA TÉLÉVISION ?

Appuyer sur le bouton rouge «power» et ensuite cliquer sur «CONFIRM ALL OFF» sur l'écran tactile de votre télécommande




[RETOUR AUX GUIDES](#)



HOW TO TURN ON MY TV SAMSUNG THE FRAME?

STEP 1 : On your remote control Crestron, press on the touchpad to turn it on. Then, press on the «TV CHANNELS» button to switch on your TV.

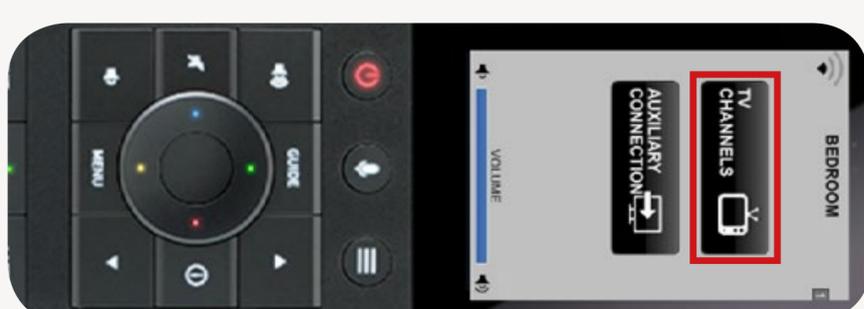


WARNING : If the «TV CHANNELS» button is not visible, press on the following button  until going back to the homepage of your remote control

HOW TO SWITCH CHANNEL?

OPTION 1 : After clicking on «TV CHANNELS» button, a keypad will appear. Then, enter the channel number as desired




OPTION 2 : Press on the top/bottom arrow to switch channel

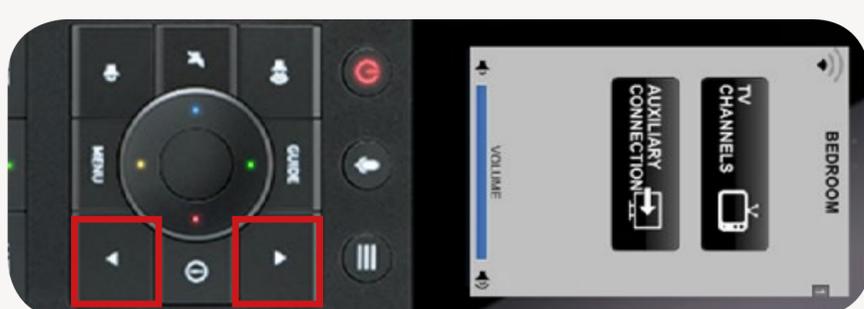

HOW TO SWITCH OFF MY TV ?

Press on the «power» button. Then, on the touch pad of your remote control, press on «CONFIRM ALL OFF»

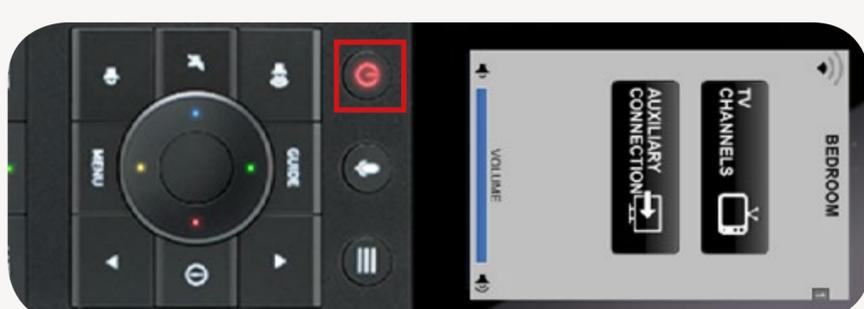

[BACK TO THE USER GUIDES](#)